



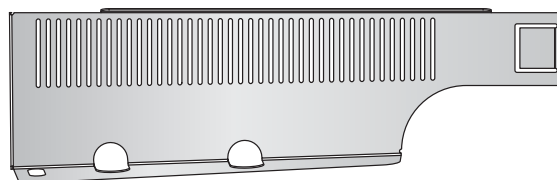

ALL SEASON SCREEN

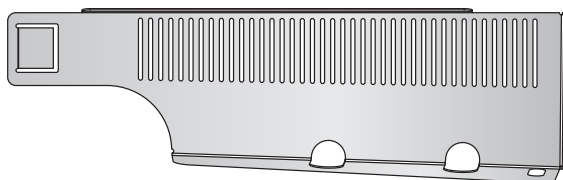

XX-147

**Mirror Stainless Steel &
Black Powder Coated**



2003-2006 Chevrolet Silverado Bumper Screen

Visit our web site at www.cloud-rider.com

All Season Screen™ Installation Instructions For Part Numbers: XX-147



**Please Read
Before Installing**


*Attention Installer: Instructions must be provided to Purchaser
Your All Season Screen™ comes with the following list of hardware.*

Bumper Screens


- 2x** ½" x 1½" Hex Head Bolt
- 4x** ⅞" Flat Washer
- 2x** ½" Lock Washer
- 2x** ½" Nut

Assemble your screen as per diagrams and photos.

1. From behind the bumper, push the rubber protector up and out of the way.
2. Slip the screens behind the bumper. Screen A fits on the drivers side opening, and Screen B fits on the passenger side. The cut-outs of each screen fit over top of the existing plastic push pins. The ends of the screens should wedge into the gap between the frame and the bumper. Images 1 & 2.
3. Insert the ½" x 1½" **Hex Head Bolts** along with the ⅞" **Flat Washers**, ½" **Lock Washers**, & ½" **Nuts** in the locations shown, and tighten with ¾" wrench. Image 2 & 3
4. Pull the rubber protector back down to it's original position.
5. Reverse the process to remove.

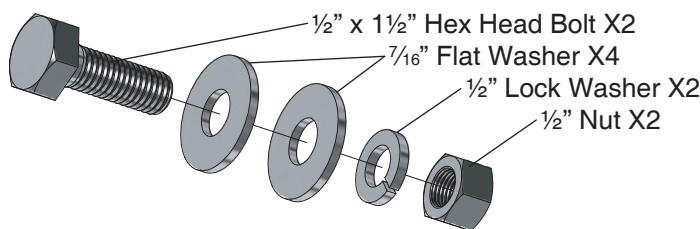

Screen A

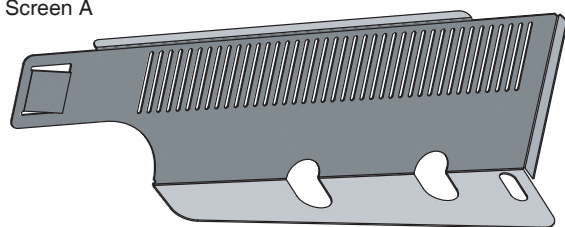

Screen B

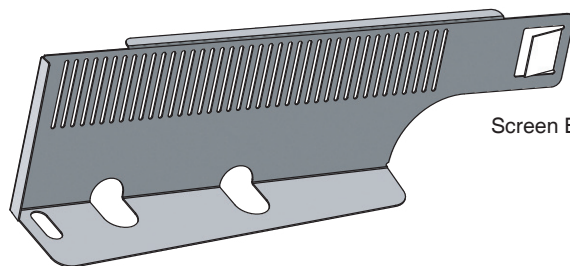


Image 1

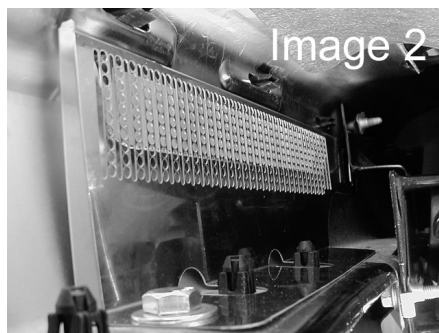


Image 2



Image 3